


NEO·GEO™

SERVICE MANUAL

— MV-1FZ —

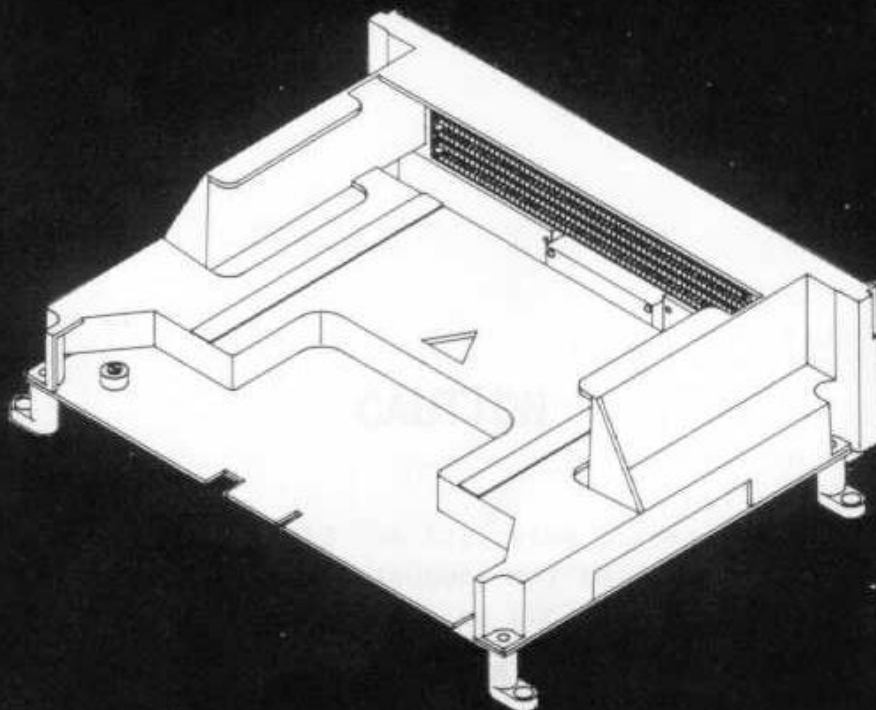

SNK

INTRODUCTION

Welcome to the NEO-GEO MULTI VIDEO SYSTEM. This unique system by SNK enables you to save space and maximize your income with PCBs of high quality and of easy maintenance.

The newly developed MV-1FZ has been more compactly designed than any former PCBs for carrying one NEO-GEO game, and the PCB can be directly connected to the JAMMA standardized cabinet.

Income data keeping and other featured functions of all NEO-GEO systems are of course available with MV-1FZ, too.

Please read this service manual carefully before starting to use the MVS and keep it at your side for further reference.

☆JAMMA...Japan Amusement Machinery Manufacturers Association

CAUTION

◇To set up the MVS, avoid the following places:

- *Where leaks or dew from moisture may be caused
- *Humid places like indoor swimming pools and showers
- *Where direct heat strikes or in the hot air
- *Near ignitable or volatile chemicals and other dangerous articles
- *Near emergency exits or fire extinguishers
- *Inclined places or near vibrating places
- *Dusty places

◇Keep the temperature between 5℃ and 40℃.


◇Do not put heavy objects on top of the PCBs.

◇Use the power supply at DC5V±1%.

CONTENTS

NOTES	1
INTRODUCTION	2
CAUTION	2
CONTENTS	3
COMPONENTS	4
1 SETTING THE SOFT CARTRIDGES	4
-1 BEFORE SETTING	5
-2 SETTING CARTRIDGES	5
-3 POWER ON	5
2 MODE SETTING	5
-1 STARTING	6
-2 MAIN MENU	6
-3 HARDWARE TEST	7
-4 SETTING THE HARDWARE DIP	10
-5 SETTING THE SOFTWARE DIP	10
-6 INCOME DATA KEEPING	12
-7 SETTING THE CODE NUMBER	15
-8 SETTING THE CALENDAR	15
MAIN HARNESS	16
WIRING DIAGRAM	17
DIMENSION	18

PCB PARTS

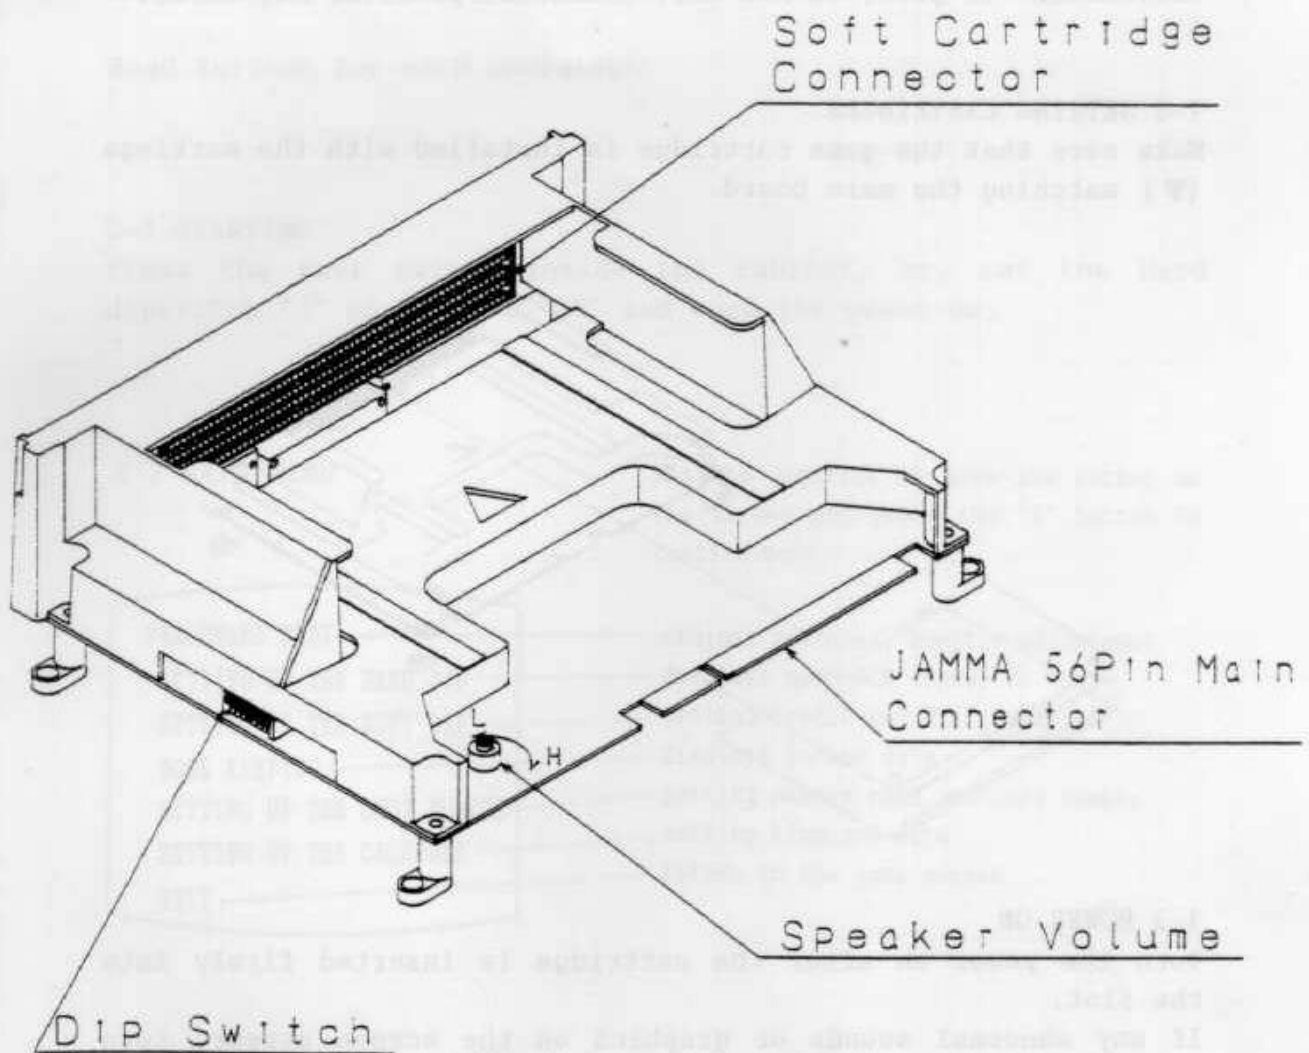


1. SETTING THE SOFT CARTRIDGES

1-1 BEFORE SETTING

MAKE SURE THAT POWER IS OFF WHEN YOU INSERT OR REMOVE THE CARTRIDGES. If power is not off, technical problems may occur.

1-2 SETTING CARTRIDGES

Make sure that the game cartridge is installed with the markings (▼) matching the main board.

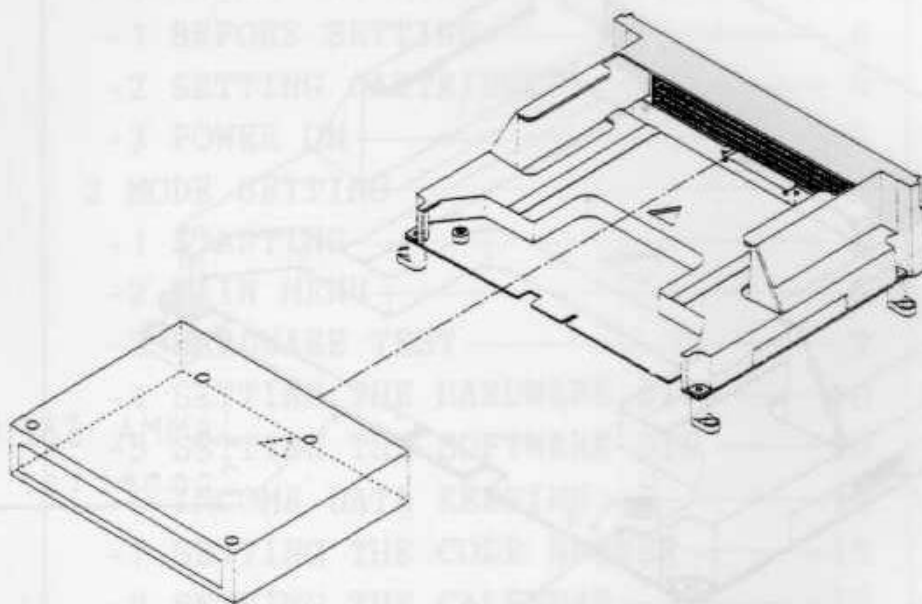

1-3 POWER ON

Turn the power on after the cartridge is inserted firmly into the slot.

If any abnormal sounds or graphics on the screen appear, turn off the power immediately and try the procedure again.

CAUTION: ⚡ Keep the slot from collecting dust and conductive things.

⚡ Do not insert anything other than the NEO-GEO MVS cartridge. NEO-GEO HOME USE CARTRIDGES cannot work on MV-1FZ.

2. MODE SETTING

The MVS enables dip settings on the monitor screen instead of the Hard dipswitch settings on the PCBs of other systems. Income data keeping is also possible on the screen.


Read further for each operation.

2-1 STARTING

Press the test switch inside the cabinet, or, set the Hard dipswitch "1" on the PCB "ON" and turn the power on.

2-2 MAIN MENU

Use the joystick to move the cursor on the screen and press the "A" button to confirm mode.

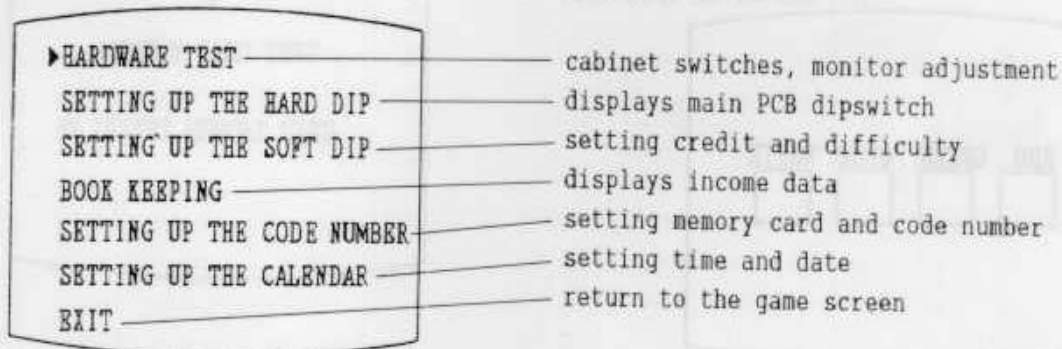


1. SETTING THE SOFT CARTRIDGE BITTER 300M S

2-3 HARDWARE TEST

Press the 1P start button to go to the next screen.


2-3-1 Crosshatch

Adjust position and size of the game screen here.

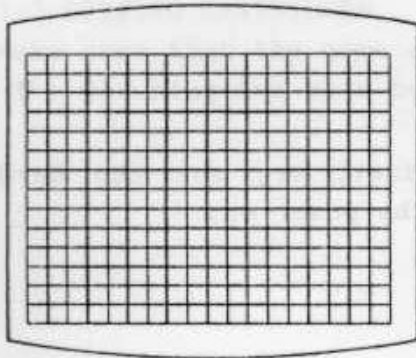

2-3-2 Color Adjustment

Adjust color on the screen.

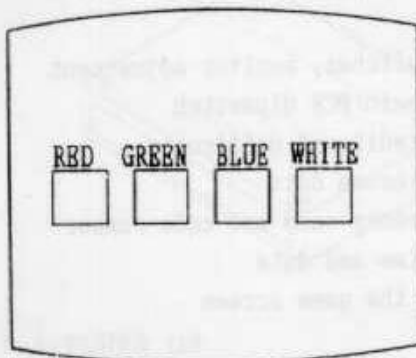


2-3-3 I/O Check

		I/O CHECK							
		P1	P2	1	2	3	4	5	6
UP		0	0	0	0	0	0	0	0
DOWN		0	0	0	0	0	0	0	0
LEFT		0	0	0	0	0	0	0	0
RIGHT		0	0	0	0	0	0	0	0
PUSH1		0	0	0	0	0	0	0	0
PUSH2		0	0	0	0	0	0	0	0
PUSH3		0	0	0	0	0	0	0	0
PUSH4		0	0	0	0	0	0	0	0
START		0	0	0	0	0	0	0	0
SELECT		0	0	0	0	0	0	0	0
				TEST		0			
				COIN1		0			
				COIN2		0			
				SERVICE		0			
				EL LED1 LED2		0 00 00			

"1" stands for "on" and "0" for "off" of the dipswitch.

*SELECT, EL, LED1 & LED2 are not used with MV-1FZ.

2-3-4 Sound Test

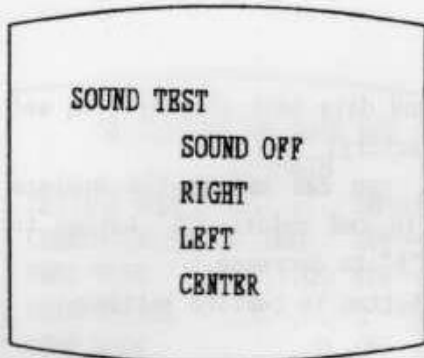


MV-1FZ IS FOR MONAURAL OUTPUT ONLY.
Sound at LEFT, RIGHT and CENTER are put
to the same speaker.

2-3-5 Memory Card Test



MV-1FZ doesn't have memory card
function. Go to the next.

2-3-6 Backup Clear

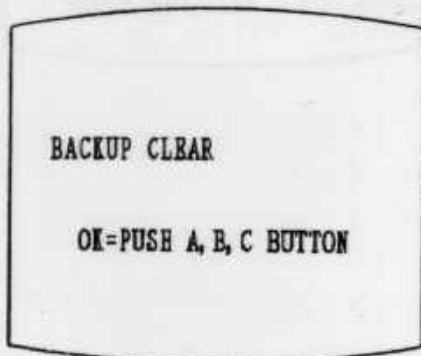

You can clear all previous data (income
data, etc.) by pressing A, B & C buttons
at the same time.

2-3-7 Calendar

SETTING UP THE CALENDAR

CURRENT TIME

17/ 2/90 SAT

19:30:41

THE TIME TO BE SET UP

A BUTTON, JOYSTICK=SELECT

17/ 2/90 19:30:41

The time and date have already been set from the factory.

If needed, you can change the numbers indicated in red color. ("A" button to increase, "B" to decrease.)

Press "D" button to confirm setting.

After the HARDWARE TEST setting, turn the power off once.
To return to the game screen, turn the power on again.

2-4 SETTING HARD DIP

Present status of the dipswitch is displayed. Press "C" button to return to the Main Menu.

SETTING UP THE HARD DIP			
	12345678		
SETTING MODE	1.....	ON	
COMMUNICATION	...000..	OFF	
FREE PLAY	0.	OFF	
COIN SWITCH	..0.....	2	
STOP MODE	0	OFF	
0=OFF 1=ON			

Test Mode / Game Mode

Set "0" (Normal Controller).

communication plays

Game starts without inserting coins.

function to pause game

2-5 SOFT DIP SETTING

2-5-1 Soft Dip Menu


Use the joystick to select and press "A" button to confirm mode.

▶SETTING UP THE CABINET	
SLOT1 NAM-1975	
SLOT2 BASEBALL STARS	
SLOT3 MAHJONG	
SLOT4 TOP PLAYERS GOLF	
SLOT5 MAGICIAN LORD	

setting Credit for 1 coin

setting difficulty

2-5-2 Cabinet Setting

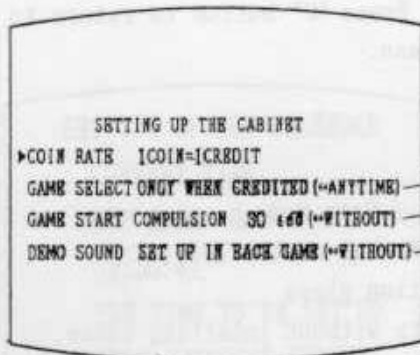


Use the joystick to move the cursor for each setting. Change mode with "A" and "B" button.

ineffect at MV-1FZ

Setting the time limit to start game
"WITHOUT" is selected, no sound even if "WITH" is set at CARTRIDGE SOFT DIP SETTING.

Press "C" button to go to the SOFT DIP SETTING Menu.

2-5-3 Soft Dip Setting

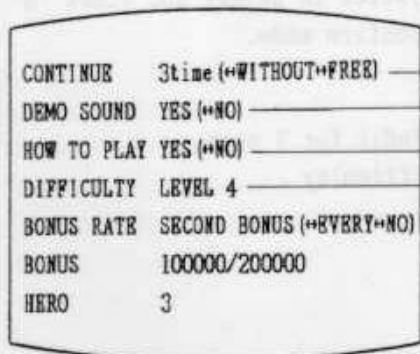

Setting menu differs by each game
setting the number of CONTINUE PLAYS
with or without demo sound
with or without "HOW TO PLAY" screen
setting difficulty of the game

Press "C" button to confirm the setting and the SOFT DIP SETTING menu will appear again. Press "C" button once more to get to the Main menu.


2-6 INCOME DATA KEEPING SYSTEM

2-6-1 Data Keeping


The MVS contains RAM for back-up and IC for calender in the system. Income and other data of the games being used are kept in the memory even when the power is off.

†Data of a maximum 8 games can be kept at the MVS, even the game cartridges are removed from the PCB.

For example: 2 games, A & B are being used on the MVS. If new game titles C & D are used to replace A & B, the previous data for A & B will remain.

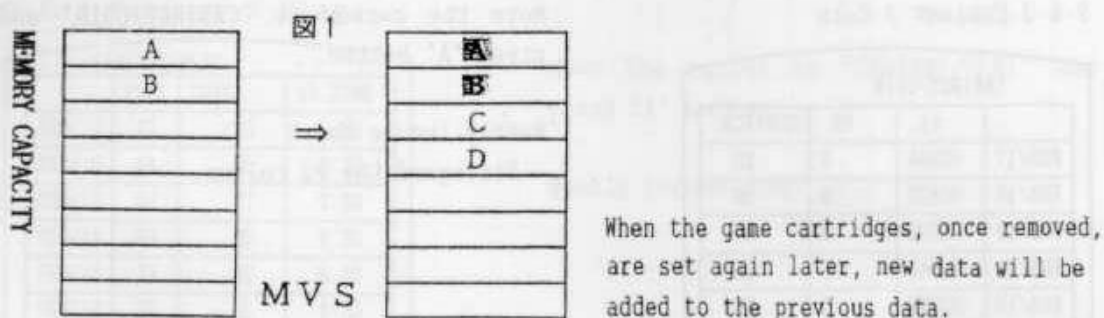

When more than 8 games are used, the oldest game's data will be deleted from the memory to input data for the newest game.

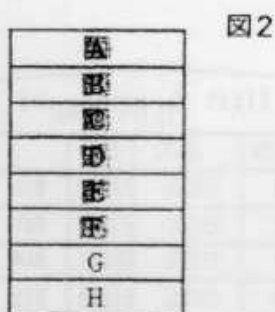

To go to the Income Data Keeping System, press the "TEST" button in the cabinet and select "BOOKKEEPING" mode on the screen.

2-6-2 Bookkeeping

►CABINET/COIN	
CABINET/PLAY	
SLOT1 NAM1975	
SLOT2 BASEBALL STARS	
SLOT3 TOP PLAYERS GOLF	
SLOT4 MAHJONG	
SLOT5 MAGICIAN LORD	

Move the cursor to "BOOKKEEPING" and press "A" button.

total income of the cabinet
total plays, continue plays of the cabinet
total plays, continue plays for each title.

2-6-3 Cabinet / Coin

CABINET/COIN			
	P1	P2	SERVICE
FEB/17	02244	0	25
FEB/16	04422	0	36
FEB/15	06633	0	47
FEB/14	08844	0	48
FEB/13	02399	0	29
FEB/12	05699	0	94

Move the cursor to "CABINET/COIN" and press "A" button.

Weekly income chart
→ Disregard the P2 column.

CABINET/COIN			
	P1	P2	SERVICE
JAN	42244	0	25
FEB	44422	0	36
MAR	56633	0	47
APR	68844	0	48
MAY	72399	0	129
JUN	55699	9	294

Income for the first 6 months of the year

#

CABINET/PLAY			
	PLAY	CONT.	AV. TIME
JUL	42244	33363	5:20
AUG	44422	35543	6:20
SEP	56633	37773	7:20
OCT	68844	39983	8:20
NOV	72399	33232	9:20
DEC	55699	15519	4:20

Income for the second 6 months of the year

Income data of each game is shown in the same way as "CABINET/COIN" and "CABINET/PLAY".

2-7 SETTING THE CODE NUMBER

CODE NUMBER SETTING
2408
D BUTTON:SET
CODE NUMBER WILL BE SET INTO
*MEMORY CARD WHEN INSERTED
DURING THIS MODE.

Not available on MV-1FZ


2-8 SETTING CALENDER

To set the calendar, refer to 2-3-7, HARDWARE TEST.


MV-1FZ MAIN HARNESS

SOLDER SIDE	PIN #		PART SIDE
G N D	A	1	G N D
G N D	B	2	G N D
+ 5V	C	3	+ 5V
+ 5V	D	4	+ 5V
	E	5	
+ 12V	F	6	+ 12V
KEY	H	7	KEY
COIN COUNTER 2	J	8	COIN COUNTER 1
COIN LOCKOUT 2	K	9	COIN LOCKOUT 1
SPEAKER (-)	L	10	SPEAKER (+)
AUDIO (GND)	M	11	
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SW	R	14	VIDEO GND
	S	15	TEST SW
COIN SW 2	T	16	COIN SW 1
START SW 2	U	17	START SW 1
2 P UP	V	18	1 P UP
2 P DOWN	W	19	1 P DOWN
2 P LEFT	X	20	1 P LEFT
2 P RIGHT	Y	21	1 P RIGHT
2 P PUSH 1	Z	22	1 P PUSH 1
2 P PUSH 2	a	23	1 P PUSH 2
2 P PUSH 3	b	24	1 P PUSH 3
2 P PUSH 4	c	25	1 P PUSH 4
	d	26	DATA INPUT SW
G N D	e	27	G N D
G N D	f	28	G N D

DATA INPUT SW is not used at normal use.

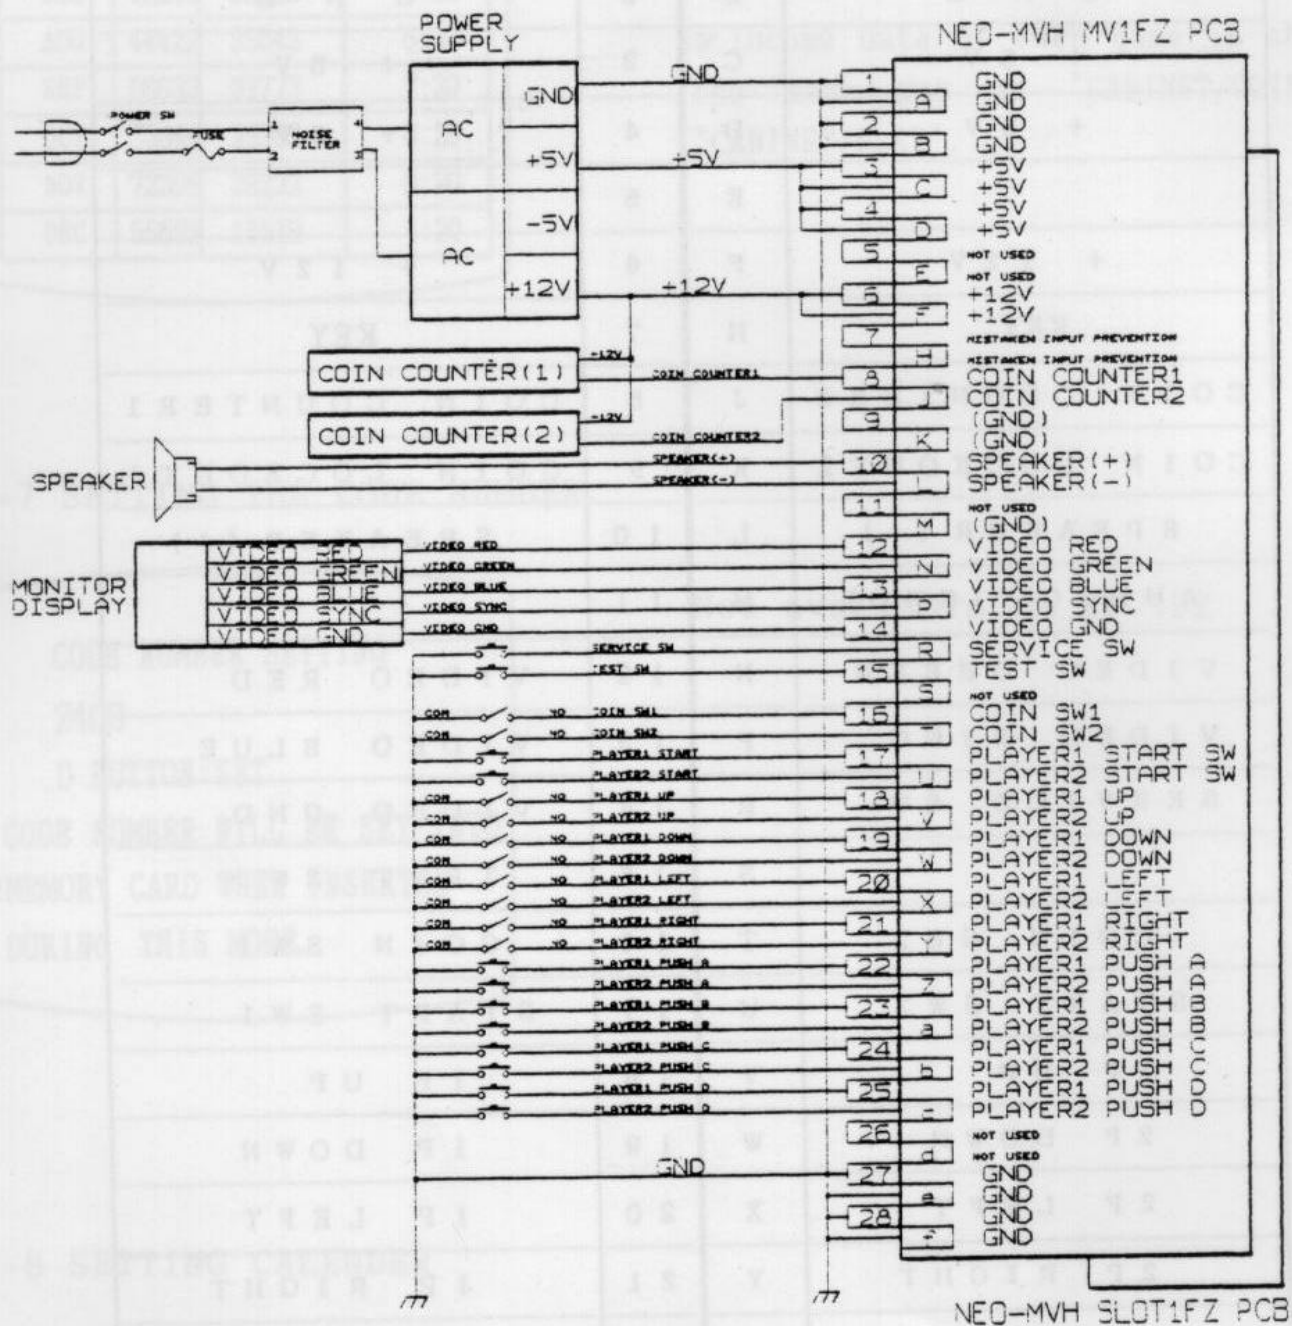

DIMENSION

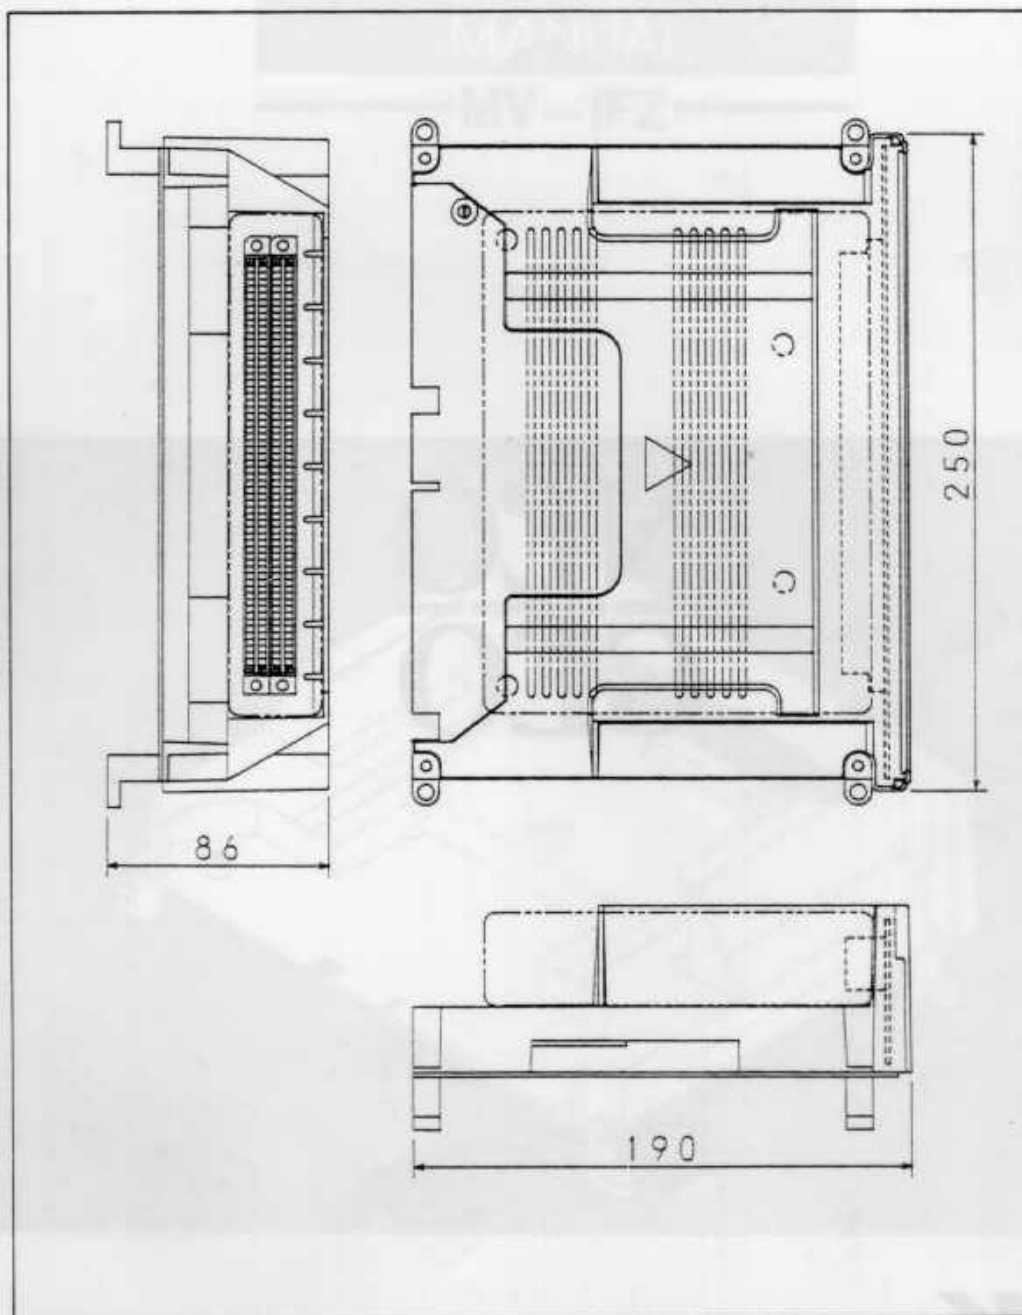

POWER SUPPLY	+ 5 V	7 A
	+ 12 V	1 A